 



1120490202

Cover of adapter no need

fix screw




Ó

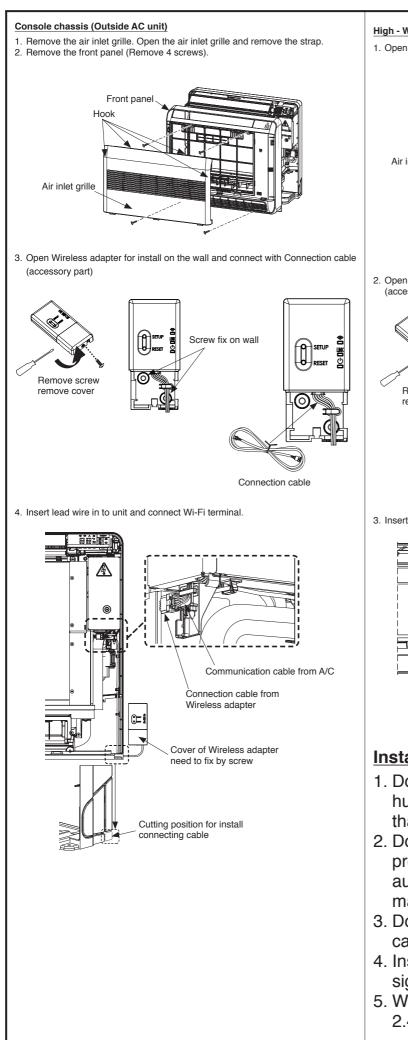


High - Wall type C (Outside AC unit)


1. Open air inlet grille and terminal cover.

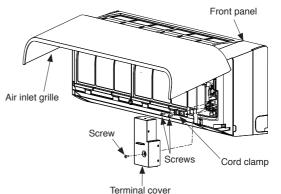

2. Open Wireless adapter for install on the wall and connect with Connection cable (accessory part)

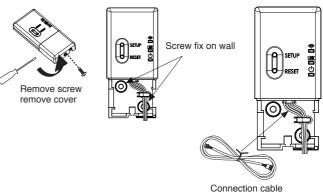



3. Insert lead wire in to unit and connect Communication cable.

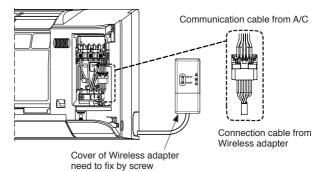


Installation note

- 1. Do not install in a location where high humidity, high temperature and location that directly to sunlight and outside air.
- 2. Do not install nearly device that can produce electrical noise such as elevators, automatic door and industrial sawing machines.
- 3. Do not modify for any electrical part, it can cause for malfunction, electric shock or fire.
- 4. Install area should be covered by Wi-Fi signal from Router.
- 5. Wireless adapter compatible with router 2.4GHz band.

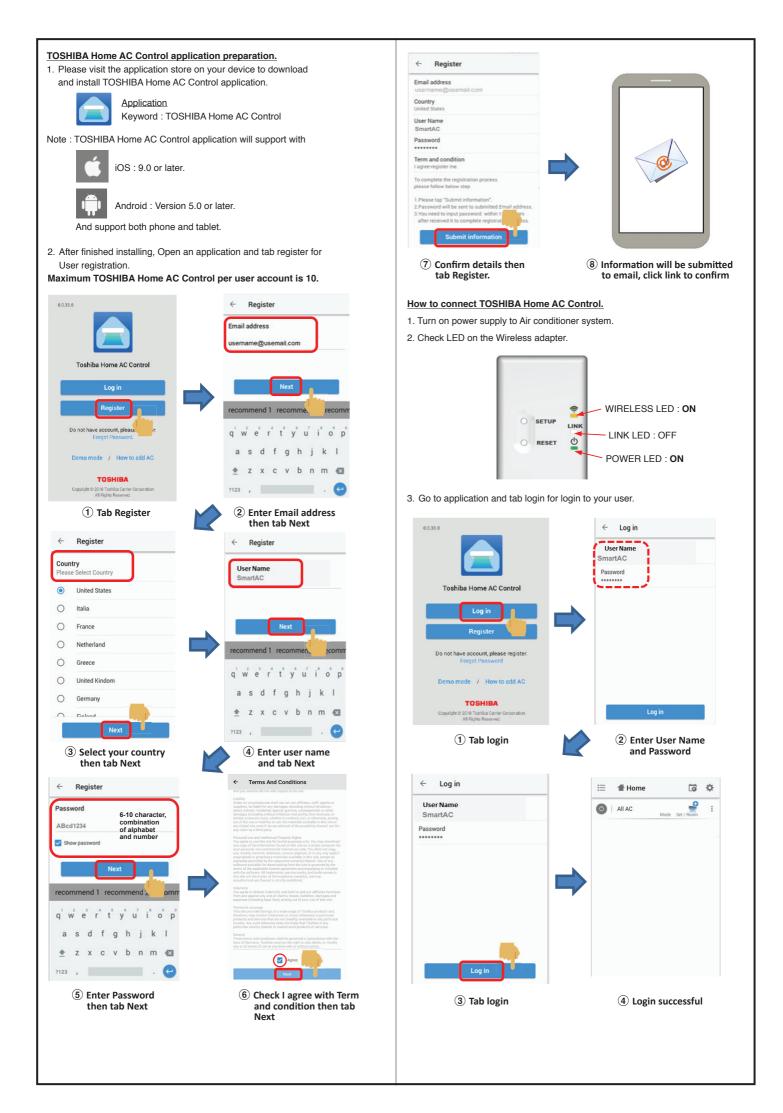

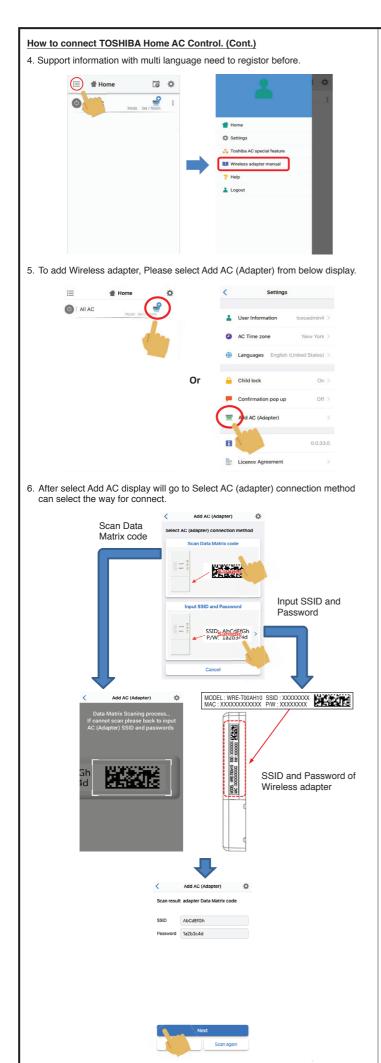

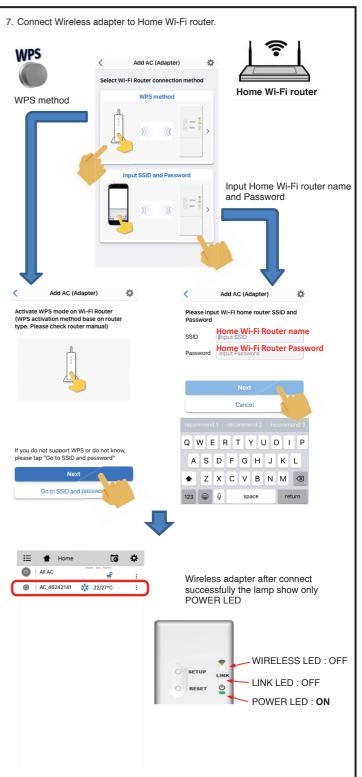

8. For add more Wireless adapter please repeat step no. 5 to 7. Note : In case of cannot connect please check error by table below.

Error detail	Adapter LED		
	((1-	LINK	Θ
Adapter ⇒ Wi-Fi router communication error	Flash 5Hz	OFF	Flash 5Hz
Adapter	Flash 5Hz	OFF	ON
Adapter ⇔ FCU communication error	Flash 5Hz	Flash 5Hz	ON
MAC address or SSID or Password or GUID no setting	Flash 5Hz	Flash 5Hz	Flash 5Hz