


- INSTALLATION MANUAL EN
- MANUALE DI INSTALLAZIONE
 - NOTICE D'INSTALLATION FR
- INSTALLATIONSANLEITUNG DE
- INSTRUCCIONES DE INSTALACIÓN ES
 - INSTRUCÇÕES DE INSTALAÇÃO PT

ULISSE EC®

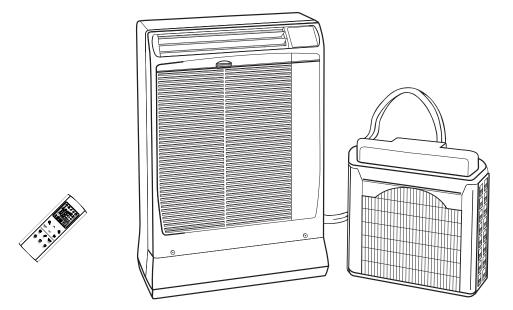

Room air conditioner with remote condenser Condizionatore d'ambiente con condensatore remoto Climatiseur avec condenseur a air exterieur - Klimagerät mit außengerät Acondicionador de ambiente con condensador a distancia Ar Condicionado com condensador remoto

CONTENTS

ΕN

		General precaution
		Accessories and tools required for installation
		Dimensions and weight
		Minimum operation and maintenance area
		Tubing length and elevation difference limits
		Installation of outdoor unit
		Wall installation (through a hole in the wall)7
		How to connect the flexible tube extension kit
10	-	Remote control unit installation10
11	-	Maintenance of the refrigerant circuit
12	-	Match between remote controller and the unit
13	-	Electrical wiring diagrams12

REGULATION (EU) No. 517/2014 - F-GAS

The unit contains R32, ua fluorinated greenhouse gas with a global warming potential (GWP) of 675. Do not release R32 into the atmosphere.

R32 (STANDARD): 0.750 kg / 0.506 Tonn. CO2 eq. R32 (STANDARD + 2 m): 0.785 kg / 0.530 Tonn. CO2 eq. R32 (STANDARD + 4 m): 0.820 kg / 0.554 Tonn. CO2 eq. Power supply:

220 - 240 V ~ / 1 / 50 Hz



The unit contains R32, a slightly flammable gas.



Before installing the unit, read this installation manual and streactly follow all safety instructions. Always contact an Argoclima Service Center.



Any repair must be performed by qualified personnel, following the instructions contained in the manufacturer's technical manual.

IMPORTANT

- Do not try to accelerate the defrosting process or to clean the appliance in different ways other than those recommended by the manufacturer.
- The unit has to be stored in a room that doesn't have any continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn the unit.
- Be aware that refrigerants do not have any odour.
- This unit has to be installed, operated and stored in a room with a floor area larger than 6m². The room
 must be well ventilated.

IN CASE OF MAINTENANCE OF THE REFRIGERANT CIRCUIT

- The installer must be in possession of the F-GAS certification without any integration.
- The installer must have the appropriate equipment (vacuum pump and recuperator) certified for R32.

1 - GENERAL PRECAUTION

- Check that the voltage and frequency of the power supply match those required by the system.
- Check the possibility to have the power line to the indoor unit (ELECTRIC CABLE LENGTH 3 m).
- Install a double pole switch, protected by 10 A fuses of the delayed type, upstream the electricity wall socket.
- Make sure that the electrical installation is suitable to supply continuosly current necessary for the air conditioner in addition to that already used by other electric appliances (white goods, lighting). See the max electric imput indicated on the name plate positioned on the air conditioner.
- Before connecting the air conditioner to a power socket, make sure that the socket is provided with an earth connection in compliance with local codes.

2 - INSTALLATION SITE SELECTION

INDOOR UNIT

AVOID:

- Positioning the indoor unit into rooms where it could be sprinkled with water (i.e. laundries).
- Installation in areas where leakage of flammable gas or large amount of mist may be expected humidity location.
- Direct sunlight or near by heat source that may affect performance of the unit.
- Installing the unit behind curtains or furniture that obstruct air circulation.

DO:

- Choose a position which allows proper ventilation in the room.
- Verify respect of the minimum recommended maintenance space.

OUTDOOR UNIT

AVOID:

 Direct sunlight or area where hot air from exhaust fans investing the unit. DO:

- Choose a place as cool as possible and well ventilated.

3 - ACCESSORIES AND TOOLS REQUIRED FOR INSTALLATION

ACCESSORIES **OUTDOOR UNIT SUPPORT CONNECTION EXTENSION KITS -**SUPPLIED WITH THE UNIT **BRACKET KIT** LENGHT OF 2 OR 4 m ACCESSORY SUPPLIED ON REQUEST FIGURE PARTS NR° ACCESSORY SUPPLIED ON REQUEST REMOTE FIGURE PARTS NR° RAWI PLUG 3 0 UNIT CONTROL 1 S X 10 EXTENSION KIT FOR CONNEC-3 1 BATTERIES FOR SCREW 7x65 £ đ TION TUBE (0) REMOTE CONTROL 2 CONNECTIONS 1 PLASTIC PLUG WASHER PLASTIC BOX \bigcirc 3 (MALE AND 2 + 2FEMALE) OUTDOOR UNIT 0 RAWL PLUG 3 SUPPORT AND 1+1GUIDE FELT PADS 4 TAPPING SCREW 3 Ammunu () ø 3,5 x 45 - automa SCREW 4,2x13 2 SUPPORTS FOR CLAMP 2 ŝ REMOTE UNIT 2 CONTROL

THE EXTENSION KITS ARE	SUPPLIED PRECHARGED
Before the installation, verify t	hat they are fit for the unit.
NARROW TUBE OUTSIDE DIA.	LARGE TUBE OUTSIDE DIA.
6.35 mm	7.93 mm


EN

TOOLS REQUIRED FOR INSTALLATION (NOT SUPPLIED)

- Phillips head screw driver Tape measure Level Hammer drill Hole saw or key hole saw ø 50
- 19 mm wrench 21 mm wrench 24 mm wrench Hammer Hacksaw Core bits 10 mm diameter drill bit.


ADDITIONAL MATERIAL REQUIRED FOR INSTALLATION (NOT SUPPLIED)


- Synthetic oil HAB Alkylbenzene type ex. EXXON ZERICE S, about 30 gr.
- PVC pipe to insulate hole in the wall, external diameter 50 mm. of minimum length as for thickness wall.

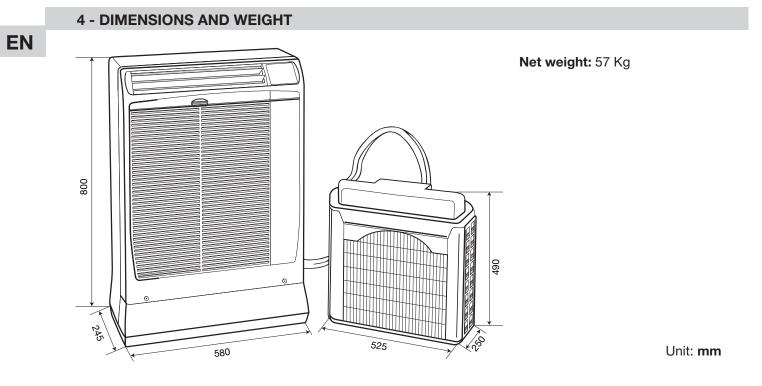


11111


5 - MINIMUM OPERATION AND MAINTENANCE AREA

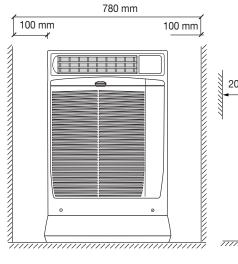

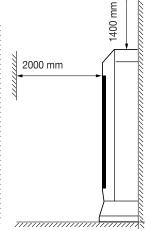


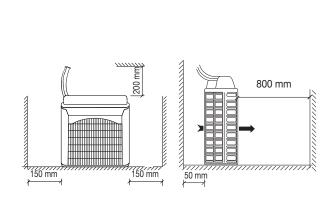

6 - TUBING LENGTH AND ELEVATION DIFFERENCE LIMITS

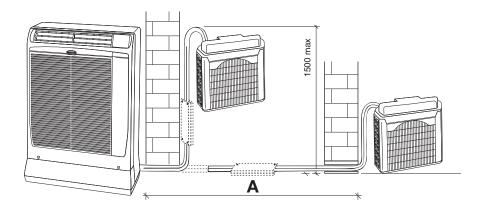


Standard mm	2 m system extension kit	4 m system extension kit
A	A	A
1500	3500	5500

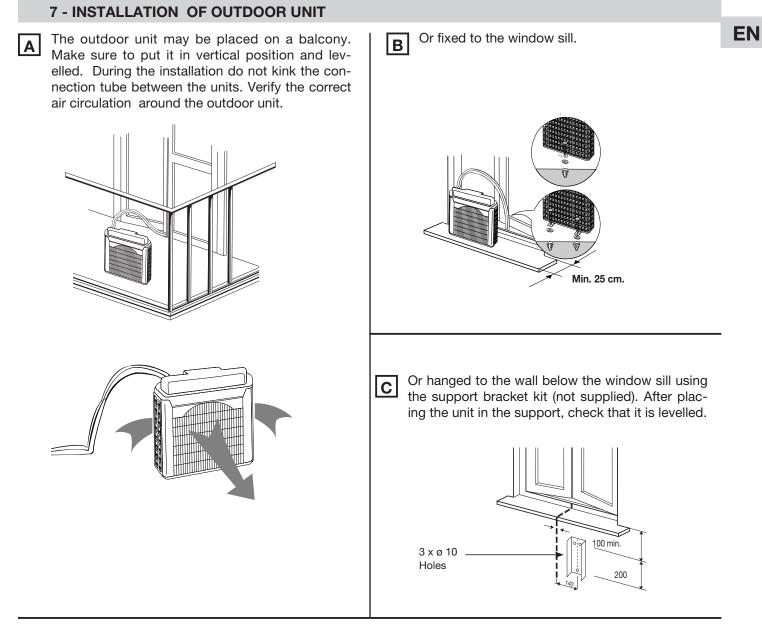


Insert the support in the handle of the outdoor unit, turn the outdoor unit upside down (see the picture).

D

Place the support and secure it at the edge of the unit. Insert the support guide fixed on the unit at the wall. Make sure it is levelled.

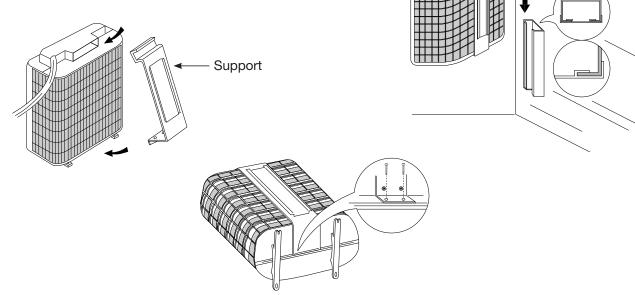

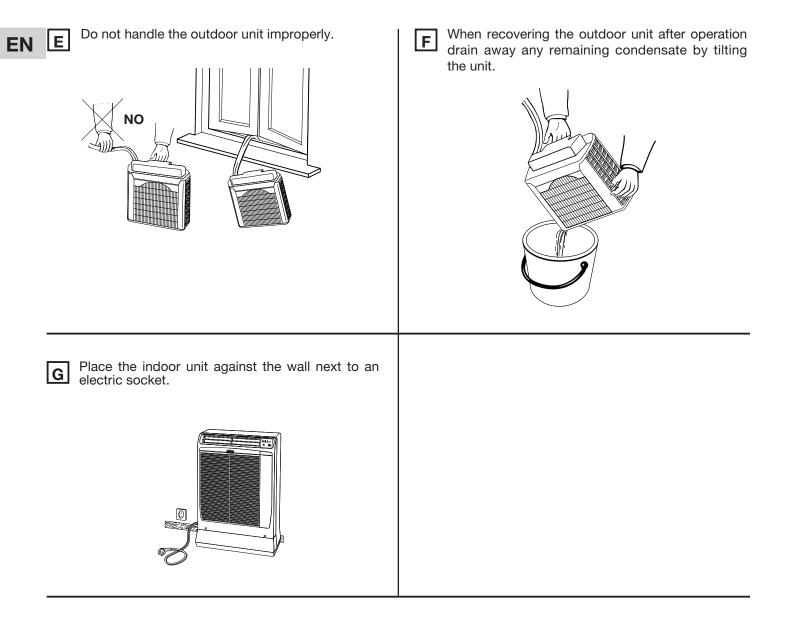


8 - WALL INSTALLATION (THROUGH A HOLE IN THE WALL)


IMPORTANT

OPERATION TO BE EXECUTED BY COMPETENT OR QUALIFIED PERSONEL

- 1. Before disassembling the outdoor unit (disjoin the rapid couplings): connect the air conditioner to a socket and let the compressor work for 5 minutes. During the disassembling operation, beat lightly with a spanner on the rapid coupling brass body (exagonal part).
- 2. Lubricate the joint surfaces (rapid coupling) with a little bit of HAB oil only (synthetic oil Alkylbenzene type ex. EXXON ZERICE S).
- 3. When you disjoin the outdoor unit, follow the described succession: first, disconnect the power supply of the air conditioner (disconnect the plug), disconnect the electric connector, then the pipes of the frigorific connection.

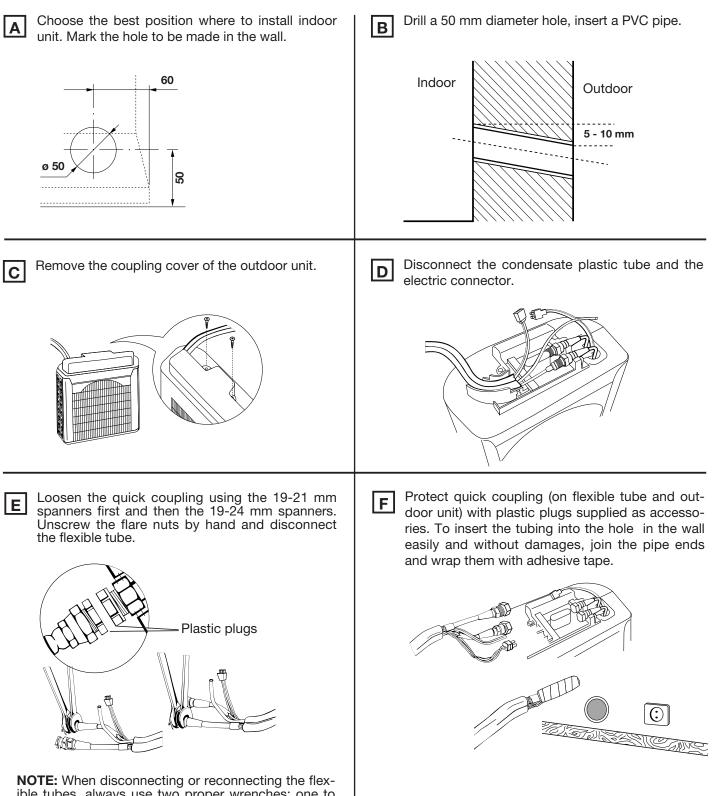

ible tubes, always use two proper wrenches: one to hold the fixed part and one to screw/unscrew.

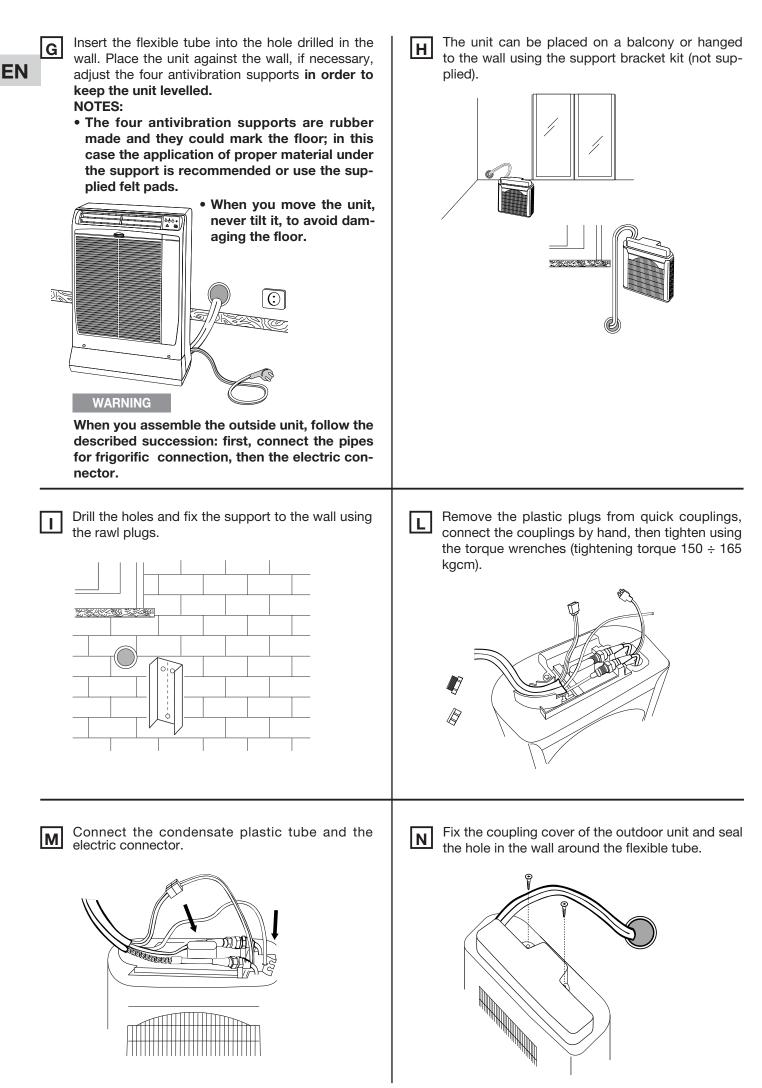

9 - HOW TO CONNECT THE FLEXIBLE TUBE EXTENSION KIT


IMPORTANT OPERATION TO BE EXECUTED BY COMPETENT OR QUALIFIED PERSONEL

В


Α

Carefully unroll the extension tube; be careful not to twist nor kink it.


Remove the plastic plug from extension tube ends (preformed tubes side).

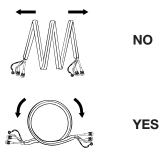



C Fit the copper tubes on the support bent side. Connect the couplings by hand, adjust carefully the tubes on unit top, then tighten using the torque wrenches (tightening torque 150 ÷ 165 kgcm).

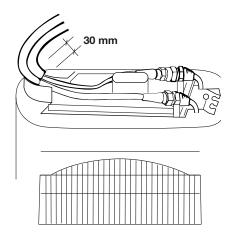

  
NOTE: When disconnecting or reconnecting the flexible tubes, always use two proper wrenches: one to hold the fixed part and one to screw/unscrew.





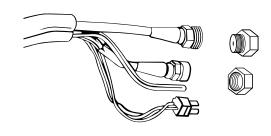


Connect the condensate plastic tube and the electric connector.

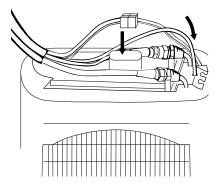




Remove the plastic plugs from opposite end of flexible tube and connect quick couplings, first by hand and then using the spanners. Cut the PVC tube (soft kind) in excess then insert it into the stiff one.

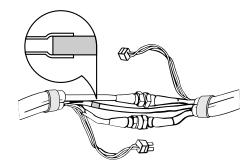

 
NOTE: When disconnecting or reconnecting the flexible tubes, always use two proper wrenches: one to hold the fixed part and one to screw/unscrew.



EN



H Adjust the couplings in the box, connect the electric cable connector then turn it by 180°. Place the electric cable and fix it to the pipe with the smallest diameter through hose clamps. Fix the gaskets on the connections box ends.

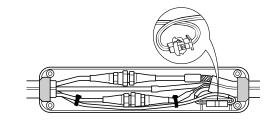

10 - REMOTE CONTROL UNIT INSTALLATION

To ensure that the air conditioner operates correctly, DO NOT install the remote control unit in the following places:

- In direct sunlight.
- Behind a curtain or other places where it is covered.
- More than 8 m. away from the air conditioner.
- In the path of the air conditioner airstream.
- Where it may become extremely hot or cold.
- Where it may be subject to electrical or magnetic noise.
- Where there is an obstacle between the remote control unit and air conditioner.

WALL-MOUNTED POSITION

- Momentarily place the remote control unit in the desired mounting position.
- Verify that the remote control unit can operate from this position.
- Fix the support at the wall with two screws and hang the remote control unit.

11 - MAINTENANCE OF THE REFRIGERANT CIRCUIT

NOTES

IMPORTANT FOR MAINTENANCE

- Make sure there is no heat source or potential heat source in the maintenance area. The open flames are forbidden in the maintenance area and the "no smoking" sign must be hanged.
- Verify that the warning sign is in good condition, otherwise replace it.

Refrigerant recovery in case of maintenance or removal of the unit

- If it is necessary to cut and weld the refrigeration circuit pipes during maintenance operations or to empty the refrigerant circuit in the event of removal of the unit, carry out the following operations:
 - 1. Turn off the unit and disconnect the power supply.
 - 2. Recover the gas.
 - 3. Make a vacuum with the vacuum pump.
 - 4. Clean the pipes with N2 gas.
 - 5. Cut and weld or bring the unit to the Service Center for welding.
 - 6. Make a leak detection check.
- The refrigerant must be recovered in the appropriate storage tank for R32 gas.
- Ensure that there is no naked flame near the vacuum pump outlet and that the area is well ventilated.

Charge of the refrigeration circuit

- Refrigerant charge apparatus, vacuum pump, hoses and adapters must be exclusively used for R32. Make sure that different types of refrigerant do not contaminate each other.
- It is suggested to charge the refrigerant in LIQUID state. Make sure that the refrigerant is the one required.
- Do not add any OIL to the compressor because precharged oil is specially selected for R410A.
- The refrigerant tank should be kept upright during filling of the refrigerant circuit.
- Stick the label on the system after you finish the refrigerant charge.
- Do not overfill.
- After completing the charge, check for leaks before doing the test run.

TABLE STAND





12 - MATCH BETWEEN REMOTE CONTROLLER AND THE UNIT

The remote control can be addressed to use up to 4 different units installed in the same room.

You can get unified control by using a single remote control for all units or each remote control can be addressed to its own unit, in order to control separately temperature, timer and all other functions.

JUMPERS SETTINGS **B**-Ð -8 JP2 JP3 CDT OCT DAT VAL VE ĎĊ J9 RB RI R2 R3 J12 J13 J14

PCB SETTING


• Disconnect the unit power supply and wait at least 60 seconds, making sure that all the lamps go off.

EN


- Remove the rear panel and the cover of the electrical box to access the pcb.
- Set JP2 and JP3 as shown in the table.
- Close the cover of the electrical box and the rear panel.
- Reconnect the unit power supply.

REMOTE CONTROLLER SETTING


- Press the button $\frac{\text{MODE}}{\text{SET}}$ for a few seconds.
- Press the arrow \wedge until you visualize 06.
- Press the button MODE again for a few seconds: the number 0 (factory setting) at the bottom starts flashing.
- Press the arrow ∧ to set 1, 2 or 3.
- Confirm with the button MODE SET
- Press 😃 to exit the menu.

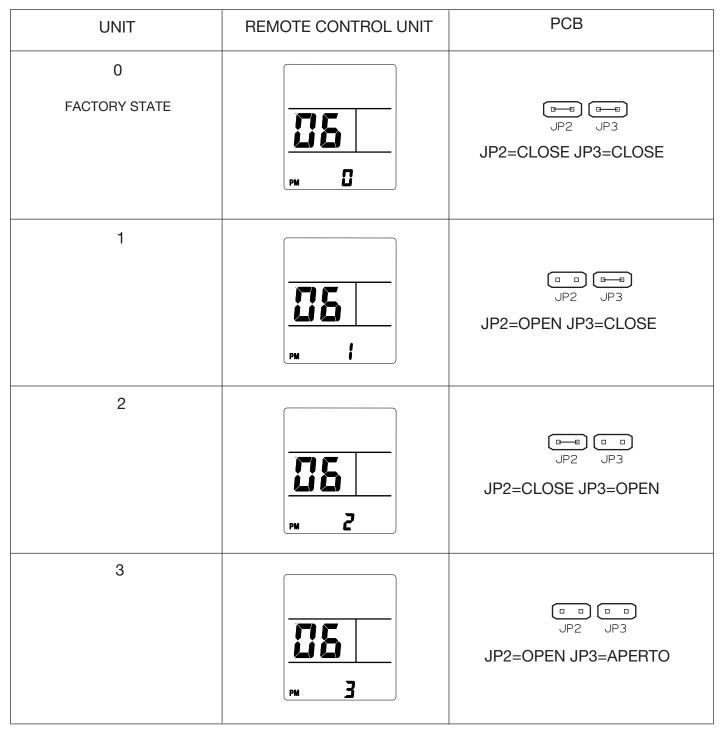

13 - ELECTRICAL WIRING DIAGRAMS - SCHEMI ELETTRICI - SCHÉMAS ÉLECTRIQUES - ELEKTRISCHE ANSCHLUSSPLÄNE - ESQUEMAS ELÉCTRICOS - DIAGRAMAS ELÉTRICOS

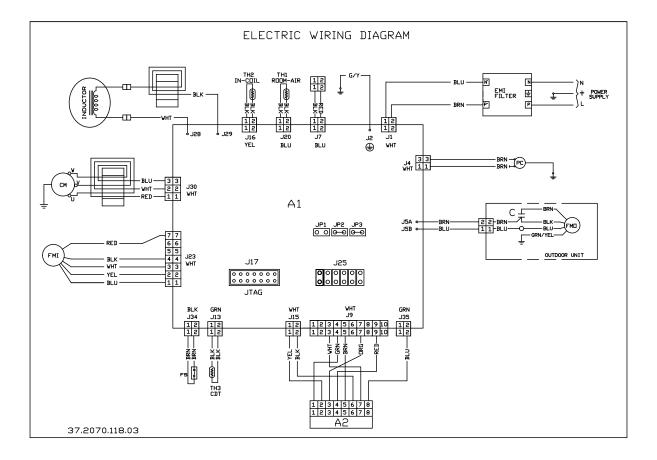

WiFI MODELS

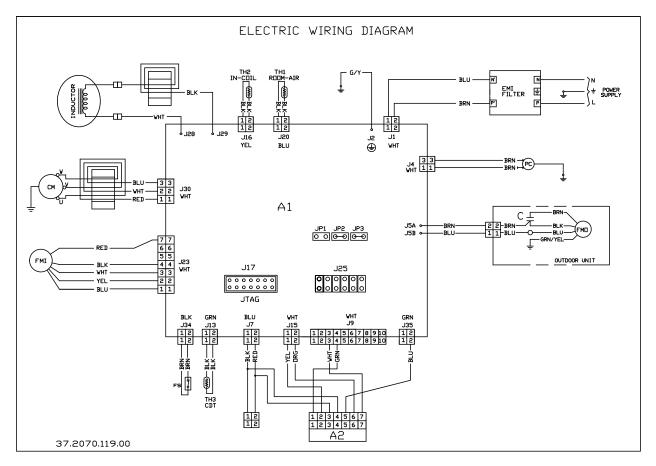

SYMBOL	EG	_	Ŀ	D	ш	ď	
PC	CONDENSATE PUMP	POMPA SCARICO CONDENSA	POMPE D'EVACUATION DES CONDENSATS KONDENSWASSERAUSLASS-PUMPE		BOMBA DE DESCARGA DEL LIQUIDO DE COND.	BOMBA DE DESCARGA DEL LIQUIDO DE COND. BOMBA DE DRENAGEM DE CONDENSADO	
CM	COMPRESSOR MOTOR	MOTORE COMPRESSORE	MOTEUR DE COMPRESSEUR	KOMPRESSORMOTOR	MOTOR DEL COMPRESOR	MOTOR DO COMPRESSOR	
C1, 2, 3	CAPACITOR	CONDENSATORE	CONDENSATEUR	KONDENSATOR	CONDENSADOR	CAPACITOR	
IND. U.	INDOOR UNIT	UNITA' INTERNA	UNITÉ INTÉRIEURE	INNENEINHEITEN	UNIDAD INTERIOR	UNIDADE INTERNA	
OUTD. U.	OUTDOOR UNIT	UNITA' ESTERNA	UNITÉ EXTÉRIEURE	AUBENEINHEITEN	UNIDAD EXTERIOR	UNIDADE EXTERNA	
FMO	OUTDOOR FAN MOTOR	MOTORE ESTERNO VENTOLA	MOTEUR DE VENTILATEUR EXTÉRIEUR	AUSSENLÜFTERMOTOR	MOTOR VENTILADOR EXTERNO	MOTOR VENTILADOR EXTERNO	
EMI		MOTORE INTERNO VENTOI A				MOTOR VENTIL ADOR INTERNO	

Electrical wiring diagrams' symbols / Simboli schemi elettrici / Symboles des schemas électriques Legende: Anschlusspläne / Símbolos de los esquemas eléctricos / Símbolos de diagramas elétricos

C1, 2, 3	CAPACITOR	CONDENSATORE	CONDENSATEUR	KONDENSATOR	CONDENSADOR	CAPACITOR
IND. U.	INDOOR UNIT	UNITA' INTERNA	UNITÉ INTÉRIEURE	INNENEINHEITEN	UNIDAD INTERIOR	UNIDADE INTERNA
OUTD. U.	OUTDOOR UNIT	UNITA' ESTERNA	UNITÉ EXTÉRIEURE	AUBENEINHEITEN	UNIDAD EXTERIOR	UNIDADE EXTERNA
FMO	OUTDOOR FAN MOTOR	MOTORE ESTERNO VENTOLA	MOTEUR DE VENTILATEUR EXTÉRIEUR	AUSSENLÜFTERMOTOR	MOTOR VENTILADOR EXTERNO	MOTOR VENTILADOR EXTERNO
FMI	INDOOR FAN MOTOR	MOTORE INTERNO VENTOLA	MOTEUR DE VENTILATEUR INTÉRIEUR	INNENLÜFTERMOTOR	MOTOR VENTILADOR INTERNO	MOTOR VENTILADOR INTERNO
IND. ASSY	INDICATOR ASSY	GRUPPO INDICATORI	ENSEMBLE INDICATEUR	ANZEIGE-BAUGRUPPE	GRUPPO DE INDICADORES	GRUPO INDICADORES
A1	CONTROLLER	SCHEDA ELETTRONICA	CONTRÔLEUR	STEUERGERÄT	CONTROLADOR	PLACA ELETRÔNICA
FS	SAFETY FLOAT SWITCH	INT. SICUREZZA A GALL.	INTERR. DE SECURITE A FLOTTEUR	SCHWEMM-SCHUTZSCHALTER	INTERR. DE SEGURIDAD DE FLOTADOR	INTERRUPTOR DE SEGURANÇA EM FLOAT
A2	SWITCH ASSY	GRUPPO INTERRUTTORI	ENSEMBLE INTERRUPTEUR	SCHALTER-BAUGRUPPE	GRUPPO DE INTERRUPTORES	GRUPO INTERRUPTORES
TH1,2	THERMISTOR	TERMISTORE	THERMISTOR	THERMISTOR	TERMISTOR	TERMISTOR
INDUCTOR	INDUCTOR	INDUTTORE	INDUCTOR	INDUCTOR	INDUCTOR	INDUCTOR
EMI FILTER	EMI FILTER	FILTRO DI RETE	FILTRE DE RESEAU	NETZFILTER	FILTRO DE RED	FILTRO DE REDE

Leyenda de los colores de los cable electrico Legenda colori fili elettrici Légende des couleurs des fils électriques Legenda das cores dos fios elétricos Beschriftung der Leitungs-Farben Wires color legend

L							
		EG	_	Ŀ	۵	Ш	Ъ
I	BLK	BLACK	NERO	NOIR	SCHWARZ	NEGRO	PRETO
	BLU	BLUE	BLU	BLEU	BLAU	AZUL	AZUL
sos	BRN	BROWN	MARRONE	MARRON	BRAUN	MARRON	MARROM
	GRN / YEL	GREEN / YELLOW	VERDE / GIALLO	VERT / JAUNE	GRÜN / GELB	VERDE / AMARILLO	VERDE / AMARELO
	GRY	GREY	GRIGIO	GRIS	GRAU	GRIS	CINZA
	ORG	ORANGE	ARANCIONE	ORANGE	ORANGE	ANARANJADO	LARANJA
	PNK	PINK	ROSA	ROSE	ROSA	ROSA	ROSA
	RED	RED	OSSOA	ROUGE	ROT	ROJO	VERMELHO
	VLT	VIOLET	VIOLA	VIOLET	VIOLETT	VIOLETA	VIOLETA
	WHT	WHITE	BIANCO	BLANC	WEISS	BLANCO	BRANCO
	YEL	YELLOW	GIALLO	JAUNE	GELB	AMARILLO	AMARELO
1							

argo*clima* 5.p.A.

Via Alfeno Varo, 35 - 25020 Alfianello - BS - Italy Tel. +39 0331 755111 - Fax +39 0331 755501 www.argoclima.com